

Sandra Diorka
Director of Public Services
Delhi Charter Township

GREASE AND OIL PROGRAM TIPS



BEFORE CONSTRUCTION

- ✘ Participate in Site Plan Review
- ✘ Do not accept indoor grease traps
- ✘ Have a minimum size (e.g., 750 gallons)

70 C.F.
165 C.F.


235 C.F.



72 HOURS
(3 WORKING DAYS)
BEFORE YOU DIG
CALL MISS DIG
800-482-7171
(TOLL-FREE)



- ✘ Have a maximum size (e.g., 3,500 gallons)
- + Require installation in series if more than maximum is needed
- ✘ Sampling manhole placed after the interceptor
- ✘ Try to bypass interceptor with sanitary waste

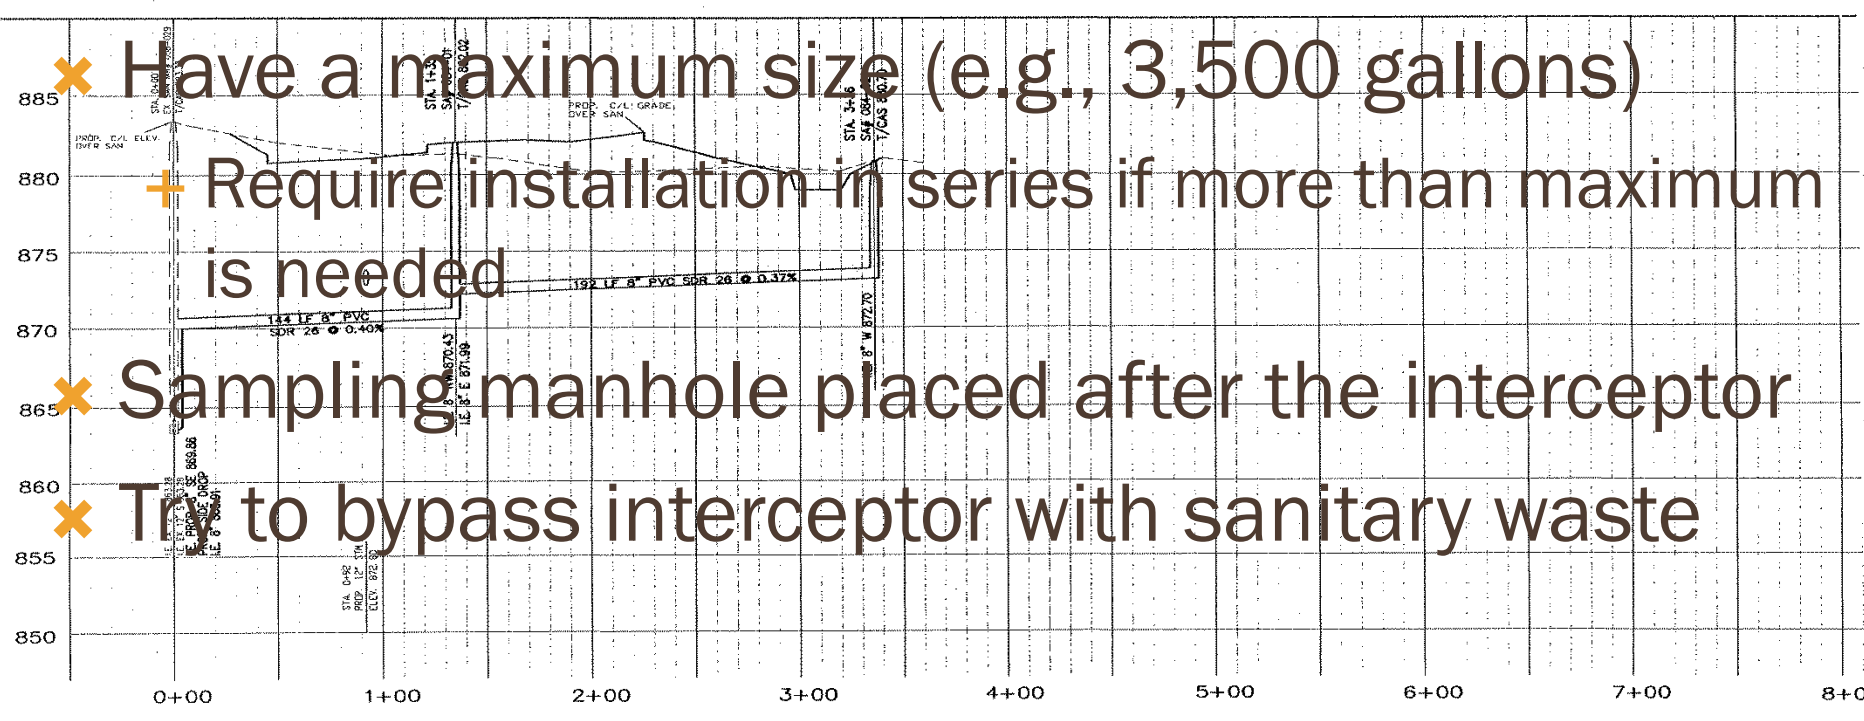

Done 7/4 Detail of construction

8x6 SADDLES

150 LF SDR 35 @ 1.65%

92 LF 6\"/>

Save w/ Sampling manhole from Downstream from Grease trap - Not to be changed WITHOUT DEP APPROVAL 10-15-13 MB

BEFORE CONSTRUCTION

- ✘ Do not believe them when they say they will not be serving “food”
- ✘ Do not forget churches
 - + ANY commercial kitchen
- ✘ Require internal piping detail to be shown on plans





ONGOING OPERATION OF INTERCEPTORS

- ✘ Be careful of haulers/drivers who pump off only the top of a tank
- ✘ An employee needs to witness pumping
- ✘ Company should return for free if the tank was not fully pumped
- ✘ Tank must be refilled with clean water after pumping
 - + Suggest running water in mop sink for number of hours required




ONGOING OPERATION OF TRAPS

- ✘ Require weekly cleaning
- ✘ Supply a check list for the cleaning
- ✘ During inspection:
 - + Make sure check list is posted
 - + Check to see cleanings were performed and signed
 - + Make sure solids going to solid waste





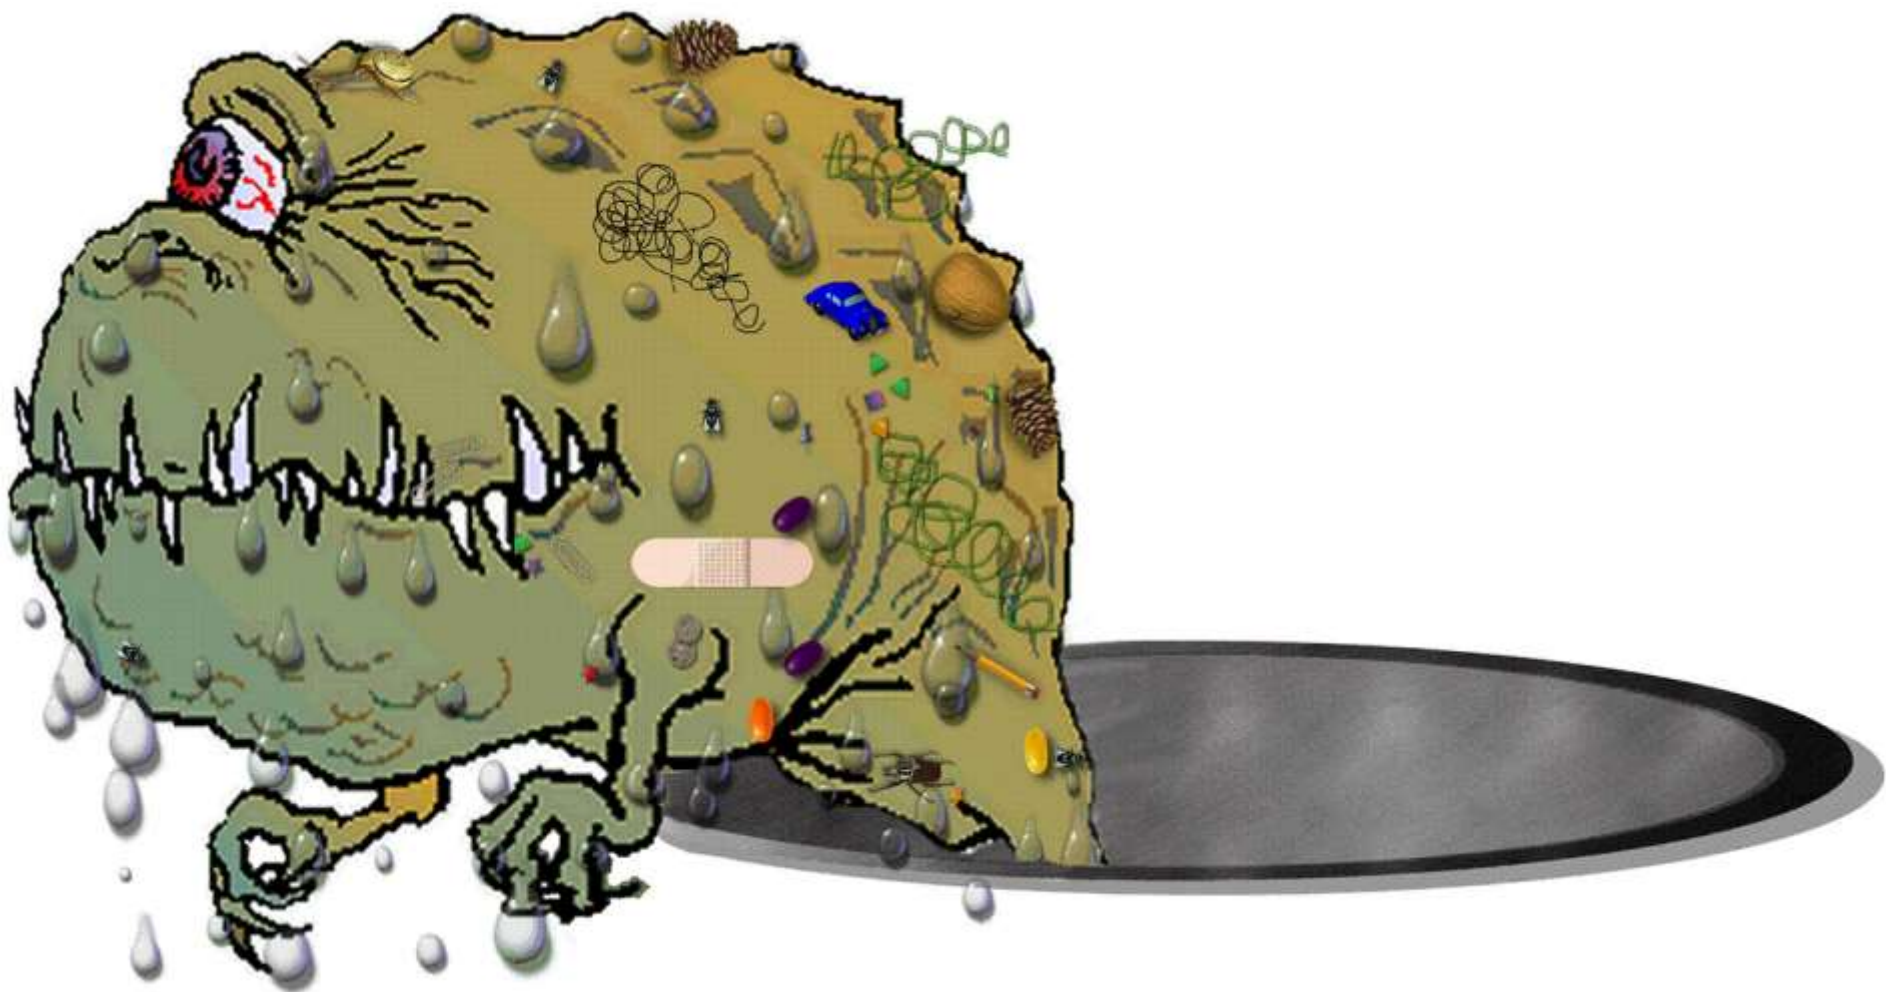

Delhi Publicly Owned Treatment Works
5961 McCue Road
Holt MI 48842

(517) 699-3873
www.delhitownship.com



*Help prevent
The Beast of Grease*



*Store it...
Don't Pour it!*